

Maintenance Schedule

If your vehicle comes with the Service Book, the maintenance schedule for your vehicle is available in the book. For vehicles without the Service Book, refer to the following maintenance schedule.

The maintenance schedule outlines the minimum required maintenance that you should perform to ensure the troublefree operation of your vehicle. Due to regional and climatic differences, some additional servicing may be required. Please consult your warranty booklet for a more detailed description.

Maintenance work should be performed by properly trained and equipped technicians. Your authorised dealer meets all of these requirements.

Service at the indicated distance or time - whichever comes first.	km x 1,000	20	40	60	80	100	120	140	160	180	200
	months	12	24	36	48	60	72	84	96	108	120
Replace engine oil	Every 5,000 km or 3 months										
Replace engine oil filter	Every 10,000 km or 6 months										
Replace air cleaner element	Every 20,000 km										
Inspect valve clearance	Every 40,000 km										
Replace fuel filter				•					•		

►► Maintenance Schedule ►

Service at the indicated distance or time - whichever comes first.	km x 1,000	20	40	60	80	100	120	140	160	180	200
	months	12	24	36	48	60	72	84	96	108	120
Replace spark plugs Iridium	Every 100,000 km										
Inspect drive belt		•		•		•		•		•	
Inspect idle speed						•					
Replace engine coolant	At 100,000 km or 5 Years,										
Replace Manual Transmission Fluid. • Use genuine Honda MTF.			•			•			•		
Replace Continuously Variable Transmission (CVT) Fluid • Use only genuine Honda HCF-2 • Using wrong type of fluid will damage the transmission		•		•		•		•		•	
Inspect front and rear brakes	Every 10,000 km or 6 months										
Replace brake fluid	Every 60,000 km or 2 Years,										
Check parking brake adjustment	•	•		•		•		•		•	
Rotate tyres (Check tyre inflation and condition at least once per month)	Every 10,000 km										
Visually inspect the following items:											
Tie rod ends, steering gear box, and boots Suspension components Driveshaft boots	Every 10,000 km or 6 months										
Brake hoses and lines (including ABS) All fluid levels and condition of fluid Exhaust system Fuel lines and connections	•	•	•	•	•	•	•	•	•	•	•

If you drive your vehicle under severe conditions, you must have the following items served to the maintenance schedule indicated as Severe.

Items	Condition
Engine oil and filter	A, B, C, D and E
Transmission fluid	B, D

✘ Maintenance Schedule

The condition is considered as severe when you drive:

- A. less than 8 km, or less than 16 km in freezing temperatures per trip.
- B. In extremely hot temperature above 35°C.
- C. With extensive idling or long periods of stop-and-go.
- D. With loaded roof rack, or in mountains.
- E. On muddy, dusty or de-iced roads.