

Maintenance Schedule

The maintenance schedule outlines the minimum required maintenance that you should perform to ensure the troublefree operation of your vehicle. Due to regional and climatic differences, some additional servicing may be required. Please consult your warranty booklet for a more detailed description.

Maintenance work should be performed by properly trained and equipped technicians. Your authorised dealer meets all of these requirements.

| Service at the indicated distance or time - whichever comes first. | km x 1,000 | 20 | 40 | 60 | 80 | 100 | 120 | 140 | 160 | 180 | 200 |
|--|------------|----|----|----|----|-----|-----|-----|-----|-----|-----|
| | months | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 | 108 | 120 |

First service (1000km) check points

| Under hood | Under Body | Cabin | Tyres |
|--|--|---|---|
| <ol style="list-style-type: none"> 1 Check engine oil level 2 Inspect battery condition (electrolyte level, load test) 3 Check All fluid levels and condition of fluids <ul style="list-style-type: none"> • Engine coolant • Brake fluid • Transmission fluid (CVTF/MTF) • Windshield washer fluid | <ol style="list-style-type: none"> 1 Inspect exhaust system components 2 Inspect suspension components 3 Inspect drive shaft boots 4 Inspect brake hoses and lines (including abs/vsa) 5 Inspect tie rod ends, steering Gearbox and boots | <ol style="list-style-type: none"> 1 Check lighting operation 2 Check operation of horn And air conditioning system 3 Check parking brake operation And brake pedal smooth operation | <ol style="list-style-type: none"> 1 Check tyre inflation Including spare tyre |

| | |
|---------------------------|-----------------------------|
| Replace engine oil | Every 5,000 km or 3 months |
| Replace engine oil filter | Every 10,000 km or 6 months |

►► Maintenance Schedule ►

| Service at the indicated distance or time - whichever comes first. | km x 1,000 | 20 | 40 | 60 | 80 | 100 | 120 | 140 | 160 | 180 | 200 |
|---|---|----|----|----|----|-----|-----|-----|-----|-----|-----|
| | months | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 | 108 | 120 |
| Replace air cleaner element | Every 30,000 km | | | | | | | | | | |
| Inspect valve clearance* ¹ (sensory method) — Adjust the valves during services 120,000 km if they are noisy. | Every 40,000 km | | | | | | | | | | |
| Replace spark plugs | Every 100,000 km | | | | | | | | | | |
| Inspect drive belt | | • | | • | | • | | • | | • | |
| Replace engine coolant | At 200,000 km or 10 years, thereafter every 100,000 km or 5 years | | | | | | | | | | |
| Replace transmission fluid | CVTF (HCF2) | | • | | • | | • | | • | | • |
| | MT-MTF | | | • | | | • | | | • | |
| Inspect front and rear brakes | Every 10,000 km or 6 months | | | | | | | | | | |
| Replace brake fluid (Use only Dot-3 or Dot-4 Brake fluid) | Every 3 years | | | | | | | | | | |
| Replace fuel filter | Every 80,000km ² | | | | | | | | | | |
| Check parking brake adjustment | • | • | | • | | • | | • | | • | |
| Replace dust and pollen filter | • | • | • | • | • | • | • | • | • | • | • |
| Rotate tyres (Check tyre inflation and condition at least once per month) | Every 10,000 km | | | | | | | | | | |

*1: Sensory Method: Adjust the valves during service 120,000 km if they are noisy.

*2: It is recommended that you replace the fuel filter if the fuel you are using is suspected to be contaminated with dust, etc. because the filter may be clogged sooner.

Note: Using the wrong type of fluid will damage the transmission

Visually inspect the following items:

| | | | | | | | | | | |
|--|-----------------------------|---|---|---|---|---|---|---|---|---|
| Tie rod ends, steering gear box, and boots Suspension components Driveshaft boots | Every 10,000 km or 6 months | | | | | | | | | |
| Brake hoses and lines (including ABS) All fluid levels and condition of fluid Exhaust system Fuel lines and connections | • | • | • | • | • | • | • | • | • | • |

If you drive your vehicle under severe conditions, you must have the following items served to the maintenance schedule indicated as Severe.

| Items | Condition |
|-----------------------|------------------|
| Engine oil and filter | A, B, C, D and E |
| Transmission fluid | B, D |

⊗ Maintenance Schedule

The condition is considered as severe when you drive:

- A. less than 8 km, or less than 16 km in freezing temperatures per trip.
- B. In extremely hot temperature above 35°C.
- C. With extensive idling or long periods of stop-and-go.
- D. With a loaded roof rack, or in mountains.
- E. On muddy, dusty or de-iced roads.