

## Maintenance Schedule

Service at the indicated distance or time - whichever comes first.	km x 1,000	20	40	60	80	100	120	140	160	180	200
	months	12	24	36	48	60	72	84	96	108	120

### First service (1000km) check points

Under hood	Under Body	Cabin	Tyres
1 Check engine oil level 2 Inspect battery condition (electrolyte level, load test) 3 Check <b>All fluid levels and condition of fluids</b> <ul style="list-style-type: none"> <li>• Engine coolant</li> <li>• Brake fluid</li> <li>• Transmission fluid (CVTF/MTF)</li> <li>• Windshield washer fluid</li> </ul>	1 Inspect exhaust system components 2 Inspect suspension components 3 Inspect drive shaft boots 4 Inspect brake hoses and lines (including abs/vsa) 5 Inspect tie rod ends, steering Gearbox and boots	1 Check lighting operation 2 Check operation of horn And air conditioning system 3 Check parking brake operation And brake pedal smooth operation	1 Check tyre inflation Including spare tyre

Replace engine oil	Every 5,000 km or 3 Months
Replace engine oil filter	Every 10,000 km or 6 Months
Replace air cleaner element	Every 30,000 km
Inspect valve clearance* <sup>1</sup>	Every 40,000 km
Replace spark plugs	Every 100,000 km
Inspect drive belt	• • • • • • • • • •
Replace engine coolant	At 200,000 km or 10 years, thereafter every 100,000 km or 5 years
Replace transmission fluid	• • • • • • • • • •
Replace dust and pollen filter	• • • • • • • • • •

\*1: Sensory Method

Adjust the valves during service 120,000 km if they are noisy.

Service at the indicated distance or time - whichever comes first.	km x 1,000	20	40	60	80	100	120	140	160	180	200
	months	12	24	36	48	60	72	84	96	108	120
Inspect front and rear brakes	Every 10,000 km or 6 Months										
Replace fuel filter*	Every 80,000 km										
Replace brake fluid	Every 3 years										
Rotate tyres (Check tyre inflation and condition at least once per month)	Every 10,000 km										
<b>Visually inspect the following items:</b>											
Driveshaft boots Tie rod ends, steering gearbox, and boots Suspension components	Every 10,000 km or 6 Months										
Brake hoses and lines (including ABS/VSA)											
Exhaust system	•	•	•	•	•	•	•	•	•	•	•
Fuel lines and connections											
All fluid levels and condition of fluid											

\*1: It is recommended that you replace the fuel filter if the fuel you are using is suspected to be contaminated with dust, etc. because the filter may be clogged sooner.

## 5

### Maintenance

If you drive your vehicle under severe conditions, you must have the following items served to the maintenance schedule indicated as Severe.

Items	Condition
Engine oil and oil filter	A, B, C, D and E

The condition is considered as severe when you drive:

- A. Less than 8 km, or less than 16 km in freezing temperatures per trip.
- B. In extremely hot temperature above 35°C.
- C. With extensive idling or long periods of stop-and-go.
- D. With a trailer towing\*, or loaded roof rack, or in mountains.
- E. On muddy, dusty or de-iced roads.

\* Not available on all models